

C & K 236 USER MANUAL

- To **arm** the system : Make sure that all the zone lights are off. Enter your PIN And press #. Make sure that the ARM light is on.
- For **stay arming**: press * 4 #
- To **bypass** any zones: press * 2 zone no. # (you may need to enter the master PIN first) (The bypassed zone will flash slowly)
- To **disarm** the system: enter your PIN and press #
- To **clear** the memory: press * 1 #
- **Panic** is activated by pressing key number 9 for 2 seconds
- Changing user **PIN** numbers: enter the master pin and press * 0 # . Enter the user number (1-6) and press # (master pin is user number 1) Enter the new pin number and press # . Enter the new pin number again and press # . Press * #. Check that the new number works.
- **Door chime**: press * 5 #
- Power light flashing: low battery
- Zone light flashing fast: zone was in alarm
- Zone light flashing slow: zone bypassed
- Service light flashing slow: try pressing * 1 #
- Service light flashing fast: failure to communicate
- Call service if problem persists

C & K SIERRA

- To Reset: Press & Hold Cancel key for 2 sec. until you hear the 2 beeps.