

## **DSC 2550. 8 ZONE ALARM SYSTEM**

To **Bypass zones** : Press \* .1. zone to bypass .#.

To **change master code**: Press \* .5. Master code .1. new code .#.

To **change Aux codes 2 to 8** : Press \* .5. Master code . 2 – 8. new code .#.

To **change Aux codes 9 to 16** : Press \* .5. Master code .9. 1-8 . new code .#.

To **reset smoke detector** : Press .#. .\*. and then hold key number 4 for 4 secs.

**Door chime** : Press \* .6. Master code .6. #.

To **read memory** : Press \* .3. check zone number .#.

To **read trouble**: Press \* .2.

zone 1 light on = low battery

zone 2 light on = mains power problem

zone 3 light on = day loop trouble

zone 4 light on = telephone line problem

zone 5 light on = failure to communicate

zone 6 light on = bell circuit trouble

zone 7 light on = smoke detector trouble

zone 8 light on = system clock

Press #.

**Quick Arm feature** : Press \* 0

To **enable quick Arm** : Press \* 6 master code 4.

To **reset system clock** only put date in not year then press #