

DSC 550/560 4 ZONE ALARM SYSTEM

- To **bypass zones** : press * .1. code zone to bypass .#.
- To **change codes** : first press * .5. master code then press 1 to change master code
Or press 2 or 3 or 4 to change auxiliary codes then enter new code and #.
- **Door chime** : press * .6. to turn on or off.
- To **read memory** : (if system light is on) press * .3. check zone number .#.
- To **read trouble** : (if system light is on) press * .2.
 - Zone 1 light on = low battery
 - Zone 2 light on = mains power problem
 - Zone 3 light on = ---
 - Zone 4 light on = fail to communicate. Press #
- **Adjust keypad sounder**: Press and hold # key
- To **adjust keypad light**: Press and hold * key