

HELP SHEET FOR THE DSC POWER SERIES
832/1565/585/5010/5015/864

To bypass a zone:

Press *1 zone number #

The zone number is always 2 digits.

Eg: if you want to bypass zone 4 it is

*1 04 #

To change your MASTER code:

*5 MASTER CODE 40 NEW CODE #

To change your AUX code:

Your AUX codes will have a position number between 01 and 32

*5 MASTER CODE 01-32 NEW CODE #

To delete old codes:

*5 MASTER CODE 01-32 ***** #

To reset smoke detectors:

Press and hold the reset button for 2 seconds.

Be sure to clear all smoke from the area first.

Or

*7

Or

* 72

To activate or deactivate the door chime:

Press and hold the CHIME button for 2 seconds.

To reset time and date:

*6 MASTER CODE 1 (ENTER TIME IN 24 HOUR) MONTH DAY YEAR

If the fail to communicate stays on:

You may need to activate the alarm to reset it.

RESET BUTTON ENTER CODE

To remove the memory light:

Be sure the front door is closed and enter your code twice.

To bypass LCD code pad:

Press * 1 > (UNTIL THE CORRECT ZONE IS SELECTED) * #

To read the trouble condition:

Press * 2 a number will then light up that will correspond with one of the following trouble conditions:

Number 1	Low Battery
Number 2	Bell Circuit Trouble
Number 3	General System Trouble
Number 4	General System Tamper
Number 5	General System Supervisory
Number 6	
Number 7	Low Zone Battery- Press 7 to view which zone
Number 8	Mains Fail