

SOLUTION PANELS. EDM. DETECTION SYSTEMS. BOSCH

SOLUTION 4+4. 6+6. 8.

TO ARM: PRESS AWAY BUTTON FOR 2 SECONDS
OR, CODE + AWAY OR, 0 + AWAY
TO DISARM: CODE + AWAY

FAULT IDENTIFICATION: -

PRESS 5 BUTTON FOR 2 SECONDS, CHECK ZONE LIGHTS

1. LOW BATTERY
2. DATE & TIME LOST. (MASTER CODE + 6 + AWAY + DD,MM,YY,HH,MM. AWAY)
3. SENSOR WATCH
4. SIREN FAIL
5. -
6. -
7. -
8. COMMUNICATIONS FAIL

CODE CHANGING:-

ENTER MASTER CODE + 1 + AWAY + USER NUMBER + AWAY + NEW CODE + AWAY.

NB: MASTER CODE IS USER NO. 1
TO BYPASS PRESS HOME + ZONE + AWAY

SOLUTION 862.880.16.

TO ARM: PRESS AND HOLD # BUTTON FOR 2 SECONDS
OR CODE + #
TO DISARM: ENTER CODE + #.

FAULT IDENTIFICATION:-

PRESS 5 BUTTON FOR 2 SECONDS, CHECK ZONE LIGHTS

1. LOW BATTERY
2. DATE & TIME LOST. (MASTER CODE + 6 + AWAY + DD,MM,YY,HH,MM. AWAY)
3. SENSOR WATCH
4. SIREN FAIL
5. TELEPHONE LINE FAULT
6. TELEPHONE LINE FAULT
6. CHECK SUM ERROR
7. -
8. COMMUNICATIONS FAIL

CODE CHANGING:-

ENTER MASTER CODE + 1 + # + USER NUMBER + # + NEW CODE + #

NB: MASTER CODE IS USER NO. 1
TO BYPASS : PRESS * BUTTON TWICE + ZONE + * BUTTON + #
IF CODE IS REQUIRED PRESS * BUTTON + CODE + * BUTTON + ZONE + * BUTTON + #